


BLACK CONDUIT TUBE | OUR BEST PRACTICE BENDING GUIDE

Recommended use to minimise damage to the outer walls when bending

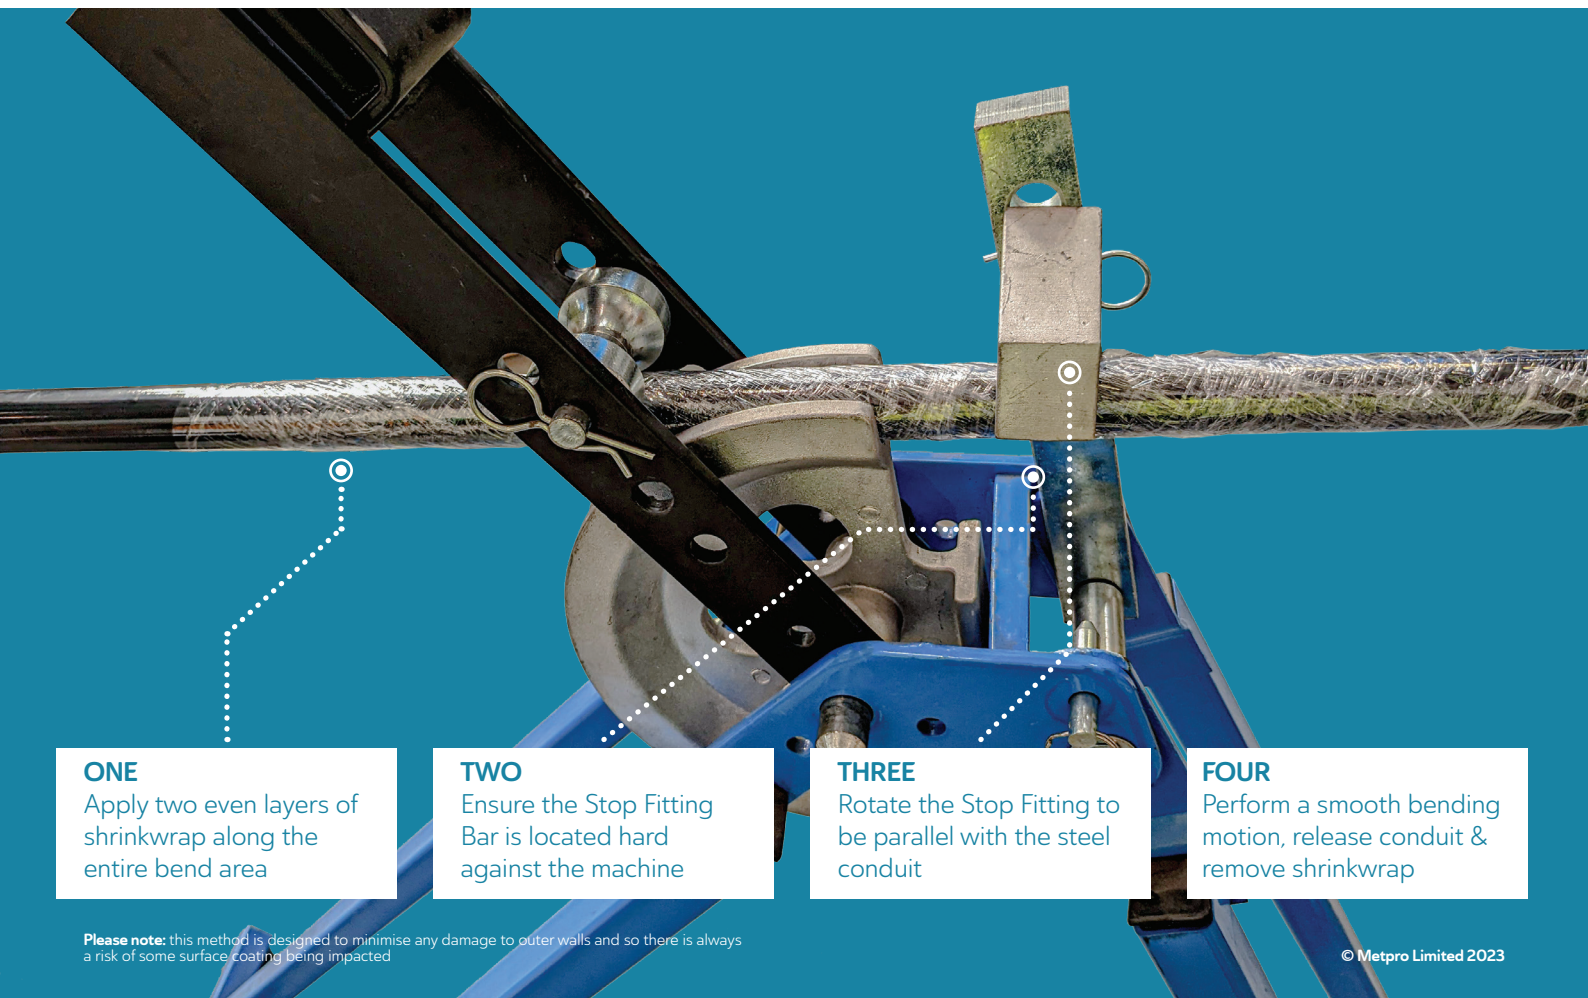

ONE

Apply two even layers of shrinkwrap along the entire bend area

TWO

Ensure the Stop Fitting Bar is located hard against the machine

THREE

Rotate the Stop Fitting to be parallel with the steel conduit

FOUR

Perform a smooth bending motion, release conduit & remove shrinkwrap

Please note: this method is designed to minimise any damage to outer walls and so there is always a risk of some surface coating being impacted